


FIGURE PS15 - 3 CELL CLAY PIT WORKING DESIGN CONCEPT

Cell No.	Excavation	Water Management	Infilling
Cell 1	Excavated Prior to the Commencement of Infilling	Water Managed in the Low Point of the Excavation During the Clay Dig	To Commence Post Excavation of Cells 1 and 2
Cell 2	Excavated Prior to the Commencement of Infilling	Water Management Area During Cell 3 Excavation and Cell 1 Infilling	To Commence Post Excavation of Cell 4 (Flexibility Due To Limited Water Storage Requirements)
Cell 3	Excavation Post Cell 2 Excavation. Timing in line with Cell 1 Infill Commencement	Water Management Area During Cell 4 Excavation and Cell 2 Infilling	To Commence Post Excavation of Cell 5 (Flexibility Due To Limited Water Storage Requirements)

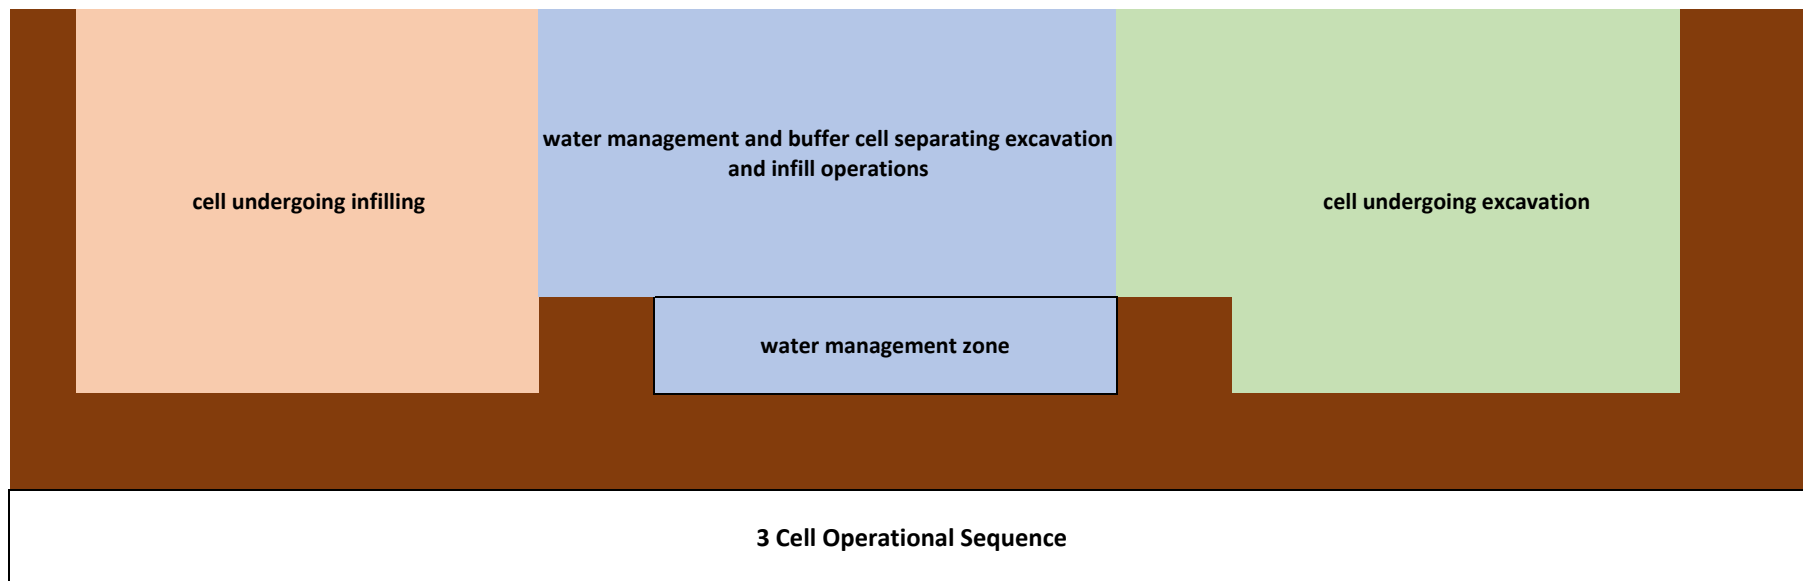

NOT TO SCALE